

User Manual

C76-ZFMT




- Please read this manual carefully before installing
- Please safekeeping of this handbook to prepare for inspection

2. Performance parameters of product

2.1. Performance parameters of lock

Item	Parameter
Door unlocking mode	Fingerprint, card, code, mechanical key
Fingerprint read time	<1second
FRR	≤0.01%
FAR	≤0.0001%
User code capacity	100
Fingerprint capacity	100
User card capacity	100
Battery	4/8 x AA alkaline batteries (DC4.8 ~ 6.5V)
Low voltage alarm	4.8V (+/-0.2V)
Static current	95~380uA
Dynamic current	200mA
Working temperature	-20°C ~ 55°C
Storage temperature	-30°C ~ 70°C
Average Working time of trouble free	≥25,000h


3. Packing list

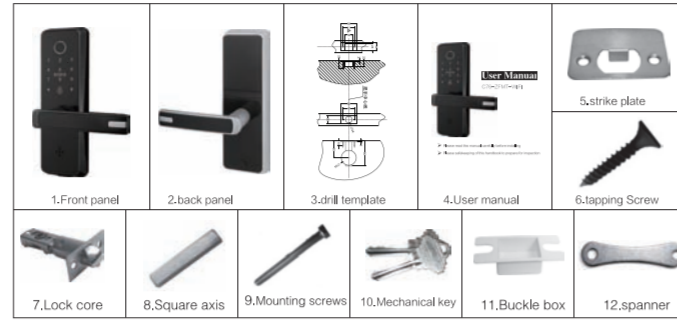

This list is for reference only, with the actual shipping list and the actual object.

3. Drilling Template

Drilling template for C76-ZFMT

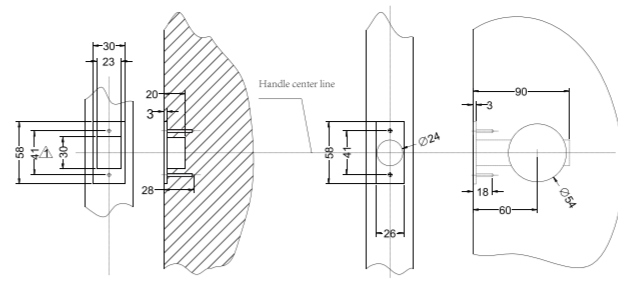

4. Installation step

- I. Draw lines**
1. Draw a horizontal center line with distance of 1M from the inside and outside to the grounds.
2. Fold the template in two, align the center line of the handle with the horizontal line of the door, draw drilling lines of the front and sides of door according to the template requirements.
- II. Drill hole**
According to the template, drill holes for lock panel and mortise.
- III. Mortise installation**
1. Insert the mortise into the hole, fix with ST4.8x19 screws from the side of door.
- IV. Debugging after installation**
1. Rotate handle, check handles flexibility of the front and back handles.
2. Remove cylinder cover, insert key, twist key clockwise to the right direction and push handle, check whether the key unlock the door normally or not.
3. Setup door locks according to operational guidelines, then test unlock function.
4. Install the battery.
- VII. Install door strike**
1. Fit door with door frame tightly, drill hole of strike box and plate according to the template.
2. Insert the strike box and plate into the hole and fasten with 4pcs ST3.5*16 screws.
3. Check whether the mortise works properly or not.

I. Product introduction

1. Introduction

	Model	C76-ZFMT
	Panel size	220 x 67.8 x 79.2mm
	Material	Zinc alloy
	Weight	1.4Kg

II. Installation guide

1. Installation requirement

- 1.1. Door thickness requires**
 - Lock edging ≥ 110mm (the door with different thickness)
 - 35mm ≤ door thickness ≤ 120mm (if door thickness ≤ 35mm or ≥ 120mm, it need customize parts)
- 1.2. Door Direction**
 - Left hand(LH) door:** people standing outside the door, facing the door, the door hinge on the left hand and push inward to open the door.
 - Right hand(RH) door:** people standing outside the door, facing the door, the door hinge on the right hand and push outward to open the door.
 - Left hand reverse(LHR) door:** people standing outside the door, facing the door, the door hinge on the left hand and pull outward to open the door.
 - Right hand reverse(RHR) door:** people standing outside the door, facing the door, the door hinge on the right hand and pull outward to open the door.

2. Tools



III. Operation Guide

1. Keypad instructions

- Press "0-9" buttons for codes
- Press "*" for return or deletion
- Press "#" for confirmation or wake up
- There is a reset button on the back panel
- When lock is in sleep mode, touch keypad, press two keys lighting blue, wake up the lock.

2. Fingerprint

- Just touch the round fingerprint sensor area

3. Quantity of fingerprint, card, code user


- Master code: 1 pcs (default master code: 123456).
- Fingerprint: 100 pcs
- Card: 100 pcs
- Code: 100 pcs

4. Unlock method

- Fingerprint, code, card and mechanical key;
- Fingerprint + code; card + code; card + fingerprint.


5. Door lock setting introduction

5.1. Change Master Code

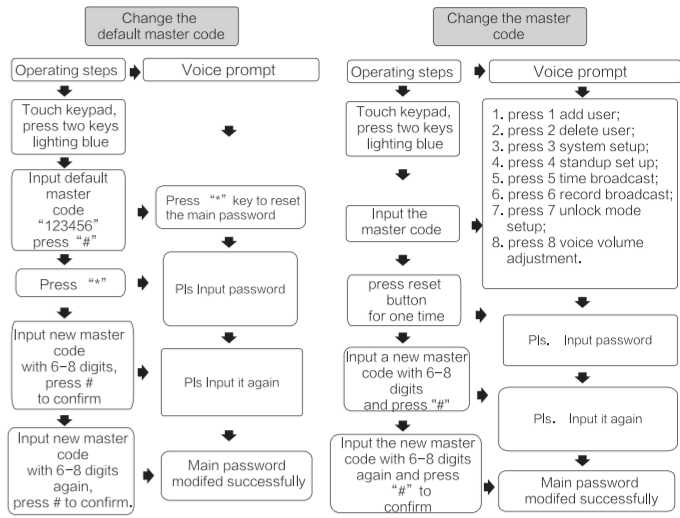


- Card, code, fingerprint can only be added after the factory default master code modified.
- New master code should be different with the default master code.
- When modify default master code, the first input code should be same with the second input code.

5.2. Add User fingerprint

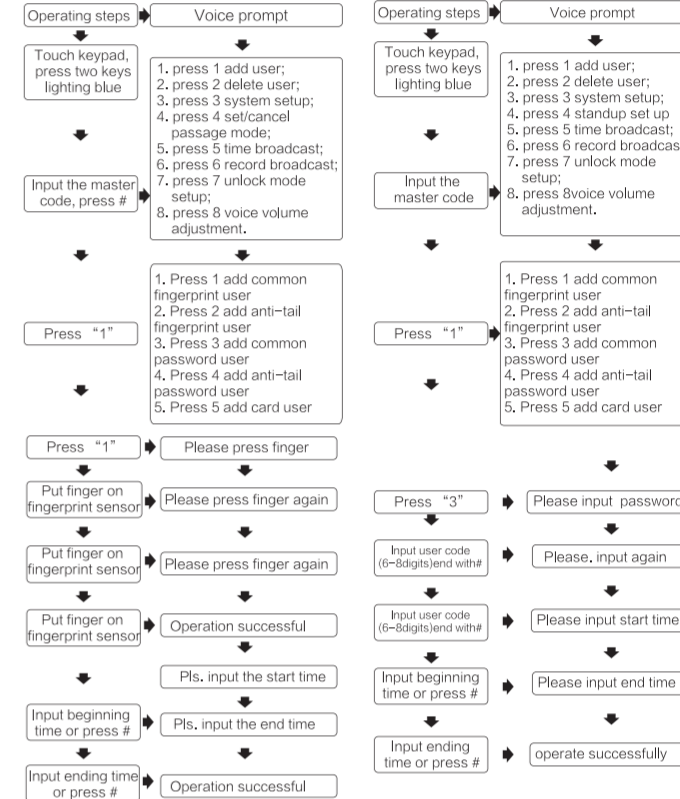


- Notes:**
 - *Time format: "Year"/"Date"/"Hour"/"Minute" e.g. 11/13/2016, Nov, 20:13
 - *If you don't want fingerprint user with time restriction, please don't input time, press "*" directly.
 - *The user index no. will be generated automatically.
 - *Common code user index No. is 001~090
 - *Anti-tail code user index No. is 091~100

5.4 Add User Card

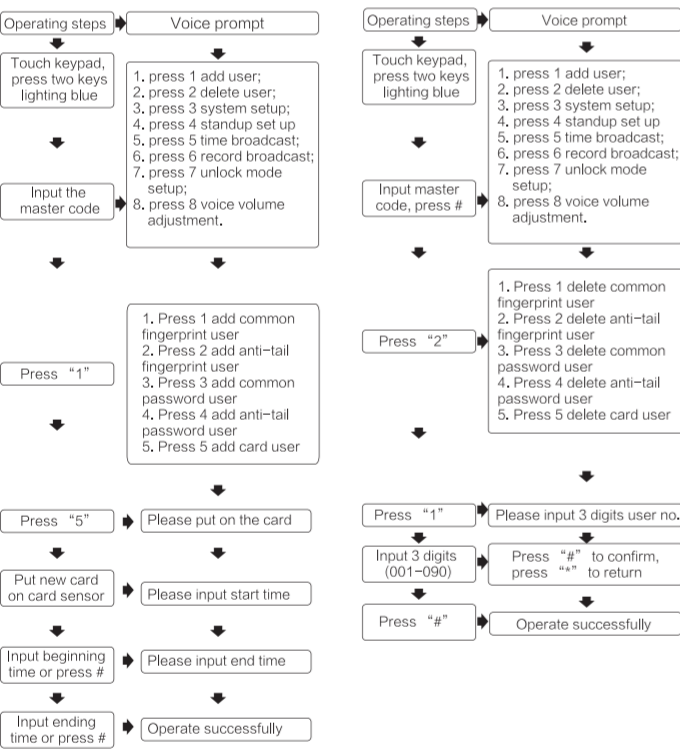


- Notes:**
 - *In the card adding status, you can add more card users continually.
 - *If you don't want card user with time restriction, please don't input time, press "*" directly.
 - *The card user index no. will be generated automatically.
 - *Card user index no. is 001~100

5.5 Delete User Fingerprint

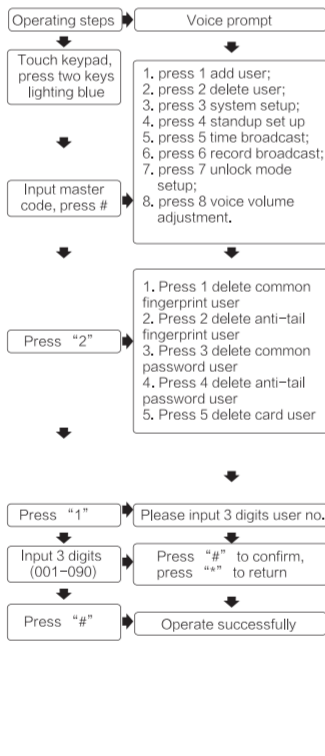

- Notes:**
 - *In the fingerprint deleting status, you can delete more fingerprint users continually.

5.6 Delete User code

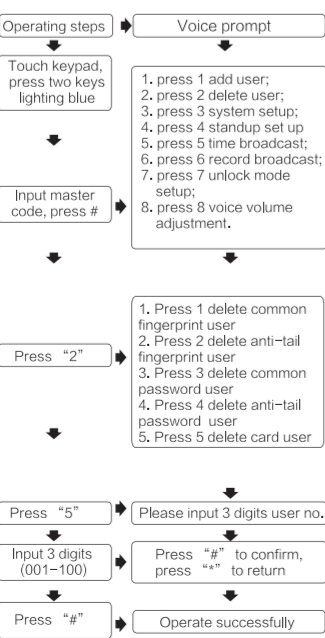


- Notes:**
 - *In the password delete status, you can delete more user code continually.


5

6. Unlock introduction


6.1 Unlock with fingerprint

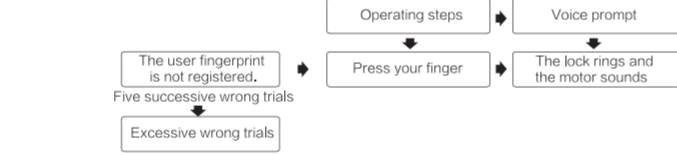

6.2 Unlock with user code

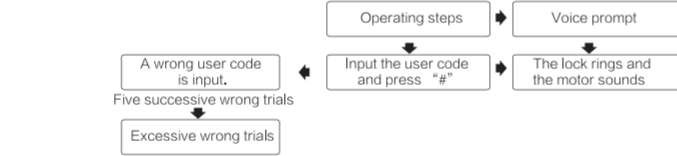


6.3 Unlock with card

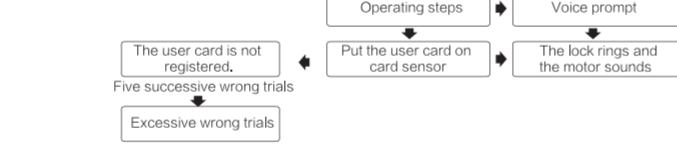


7. Door lock system setup

7.1 Door lock clock setup

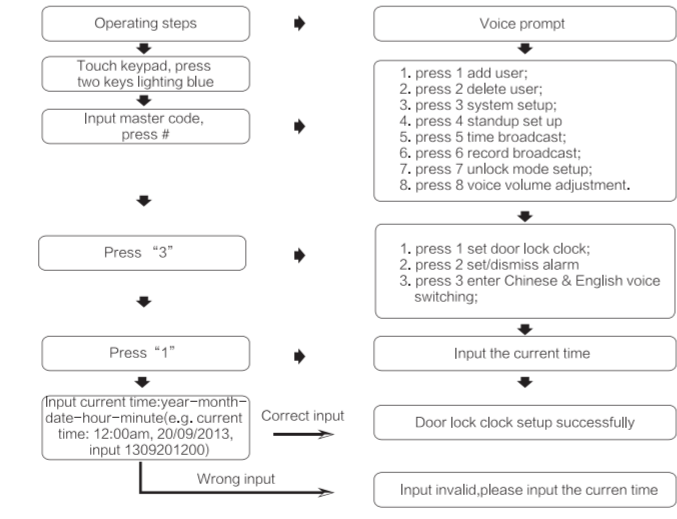


7.2 Door lock alarm setup/cancel

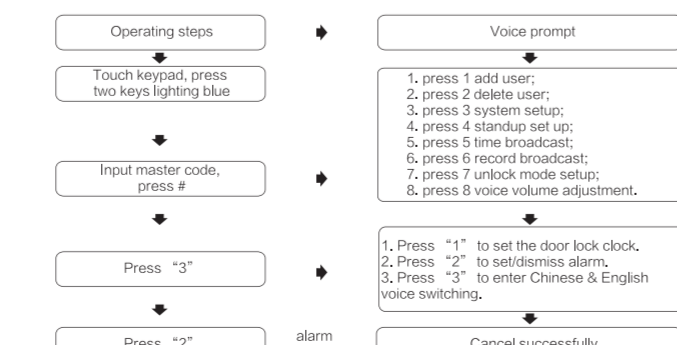


6


7.3 Chinese/English voice navigation switching

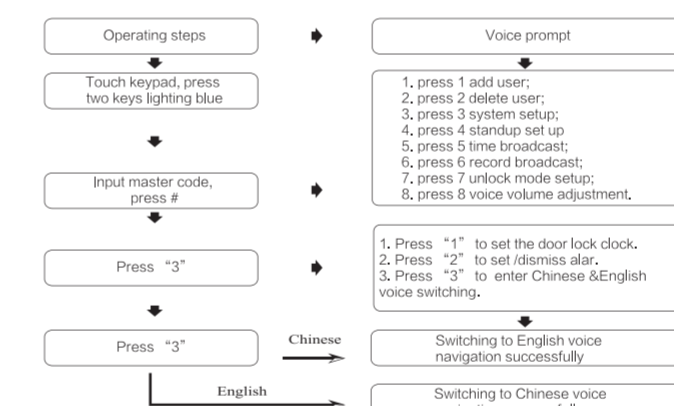


8. "Passage Mode" function setup/cancel

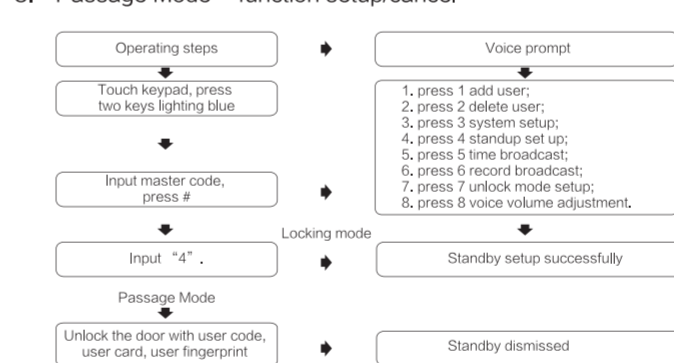


9. Door lock clock reporting

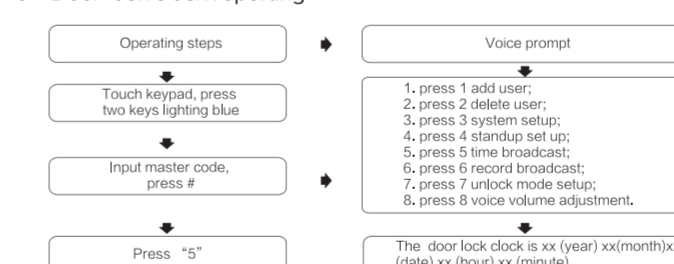

10. Door lock event record reporting

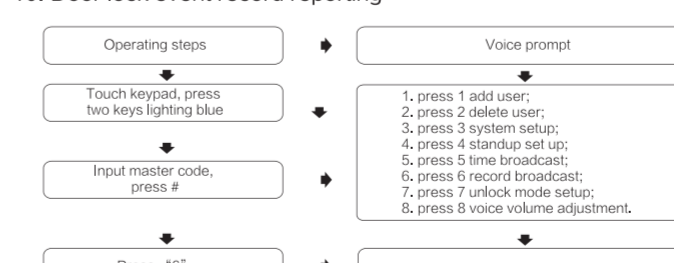


11. Door unlocking mode setup

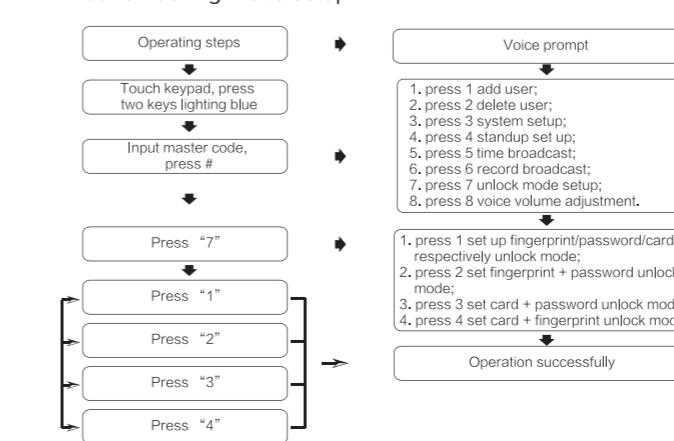


7

12. Voice volume adjustment

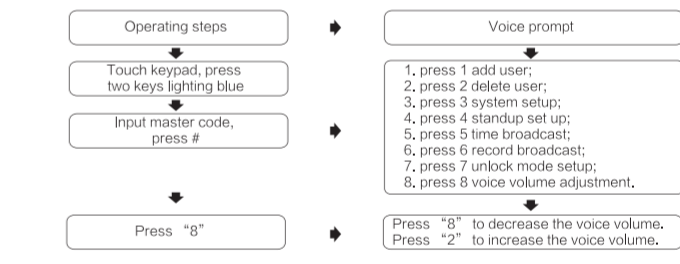

13. Restore factory defaults setting

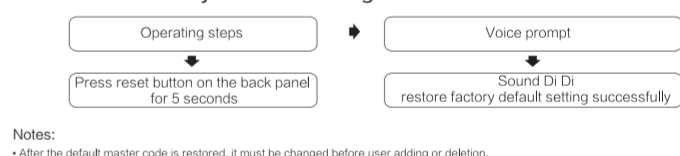


14. Malfunction prevention function

When 5 failed authentication attempt with unregistered code/fingerprint occur, the lock stops operating for 3 minutes.

15. Low battery alarm function

4 pieces AA Alkaline battery(6V), when battery voltage is lower than 5.0V, the door lock will sound a voice prompt "Low battery, Replace #".

16. Battery box & reset button

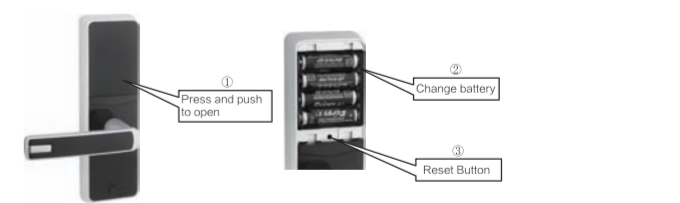

17. External power contact



8